

ASSEMBLY AND INSTRUCTION MANUAL

MODEL 1001 CAMP

© 2009 KURT BEIER & KATI QUINGER



High quality seams




Comfortable back cushions



Seat depth adjustment via stainless steel switch at the armrest

Mounting of connectors


1. Position the elements at the place supposed to stay.

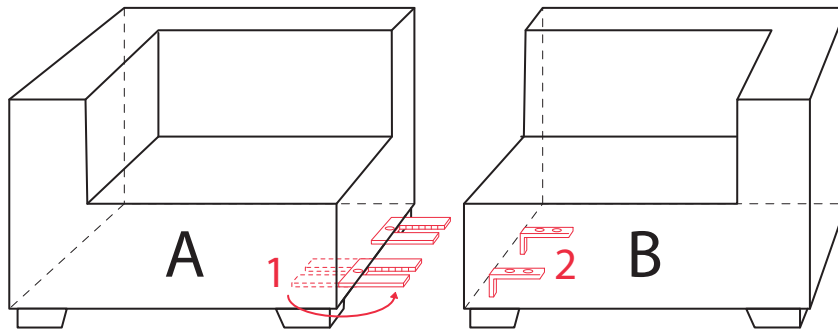

2. Turn connector ratchet 1 of element A to the outside.
3. Firmly push together part A and B, until metal guides 2 catch into guides 1.
4. In case of dismounting lift part B with the metal guides 2 and pull away.


Motorised seat depth adjustment

1. Connect the cable A that comes from the sofa to the supplied transformer and plug this into the mains.
2. By operating the switch B (set into the arm) the seat C can be extended and retracted as wished.

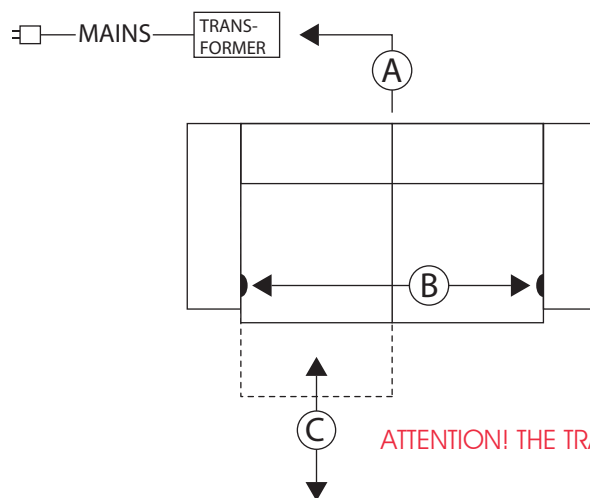


ATTENTION! THE TRANSFORMER MUST BE PLACED OUTSIDE THE SOFA!


FUNKI - how it works!

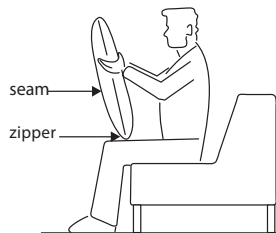


1. Take the cushion at its upper side and put the cushion on your knees with the zipper on the bottom. The seamless side faces you.

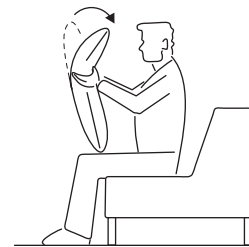

2. Move the upper part of the cushion towards yourself until the final position is reached.

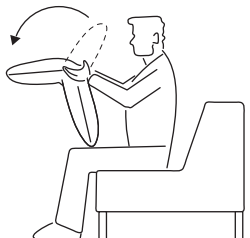

3. Now you are able to move the upper part backwards until the upper part of the cushion will click into place in the zero position.

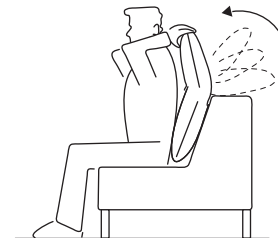

4. Now put the cushion in the preferred position (e.g. in the back, seamless side in front and zipper at the bottom). By pulling the upper part of the cushion towards yourself, you are now able to choose among 16 raster positions, however you like it.