

ASSEMBLY AND INSTRUCTION MANUAL

MODEL 6002 LETTO

© 2015 KURT BEIER & KATI QUINGER



HIGH-QUALITY
FUNCTIONAL BACK



REMOVABLE SLIP COVER
WITH ZIPPER



REMOVABLE SLIP COVER
WITHOUT ZIPPER

Assembly manual

ATTENTION! To ensure secure assembly, please observe the individual steps of instruction!


The furniture should always be mounted in pairs (2 persons)!

CONTENTS

- 2 side panels, 1 foot part (semi-product)
- 1 headboard (complete covered)
- 11 loose slip cover for corpus of bed
- 40 hexagon socket countersunk screws
- 4 corner connectors (2 x left side, 2 x right side)
- 1 beech woodcentre support rail with angle support
- 4 slatted frame angles for corner connectors
- 2 slatted frame angles for side panels
- 4 wooden feet
- 1 plastic supporting foot (120-235 mm)
- 1 allen key
- 2 plastic supporting foot (mounted)
- 8 felt gliders (glued)



1. Unpack the individual parts of the bed, place them as shown at picture and check the delivered package contents for completeness.

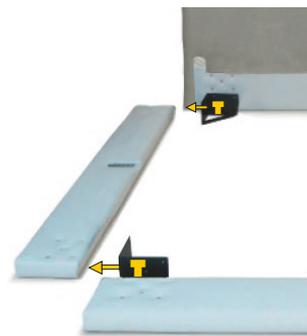


2. For assembly of bed, headboard and foot part or rather the 2 side panels should be placed at opposite side. The bores should point inwards.


3. Place each of the T-shaped punch-outs of connector angles towards the side panels. Now fix 2 angles at headboard and 2 angles at foot end of side panels. Slightly screw the bolts by hand and then tighten them with the Allen key.

Attention!


There are right- and left angles.

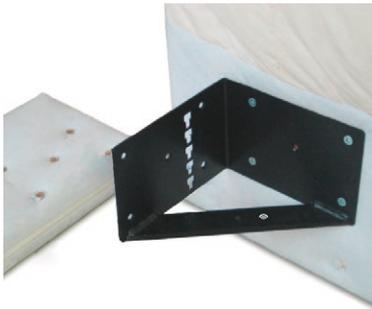

4. Set up one of the side panels and position it orderly at angle. Setzen First of all, place the 2 outer screws and slightly tighten them. Now it will be easier to place the other screws. Revise these steps with the other side panel.

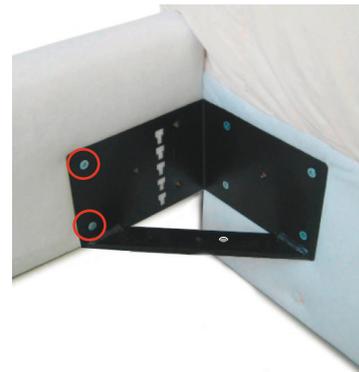

5. Next position the foot part and screw it such as point 4.

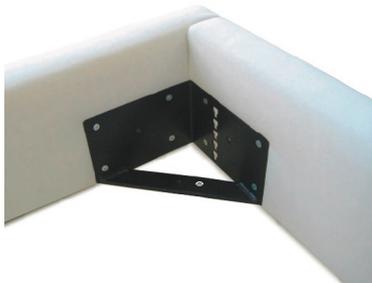

6. Screw in the 4 wooden feet into the threaded holes of connector angles.



7. Press the supporting foot into the hole of centre support rail from below.



8. Mount centre support rail at connectors of headboard and foot part at desired height and adjust supporting foot at the floor height. Start with the side of head part. If it is not possible to mount the centre support rail, slightly loose the screws of corner angles at foot part. After connecting of centre support rail tighten the screws again.



9. Mount slatted frame angles at corner connectors and at side panels in accordance with the height of centre support rail.



Angles for side panels.

Insert depth of slatted frame is height-adjustable from approx. 12,5-22 cm.




10. Place slip cover (with velcro part inwards) onto corpus of bed.

(Do not yet remove the soft side strap of velcro!)



11. Pay attention that the corner seams are exactly oriented at mitre and the parts of zipper/box pleat hang down exactly at the 2 edges in front.

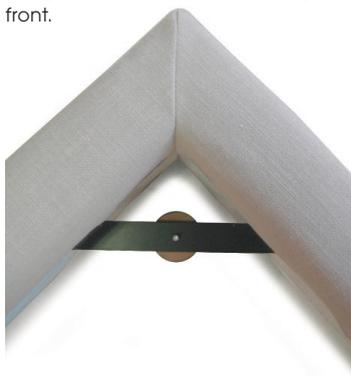

12. After you have placed the cover properly onto the corpus, remove the velcro (soft side strap) carefully and fix the cover.



13. With zipper-cover-version the zipper at head- or foot parts can be opened and closed at will.




Complete covered corpus of bed!



Instruction manual

Functional back for a flexible high back comfort

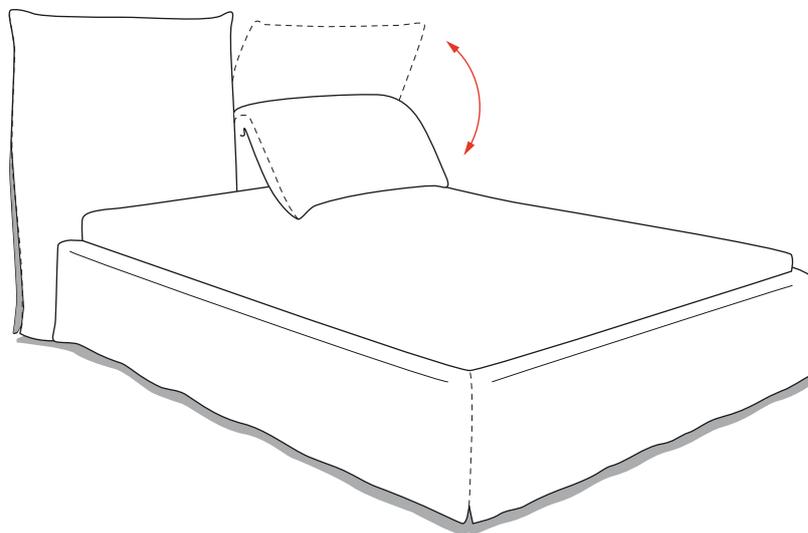

Due to a functional fitting both back parts are height-adjustable. To adjust the back, grasp it centrally and pull it up- or downwards in the desired position.

Insert depth for slatted frame: approx. 12,5-22 cm
(measured from top edge of bed frame)

